



# **User Manual**

APARTMENT HOUSE INTERCOM (ROOMSTATION) DP-SS




#### www.commax.com

COMMAX

**COMMAX Co., Ltd** 

- · Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- · The company is not responsible for any safety accidents caused by abnormal operation of the product.

#### 1. CONTROLS AND FUNCTIONS

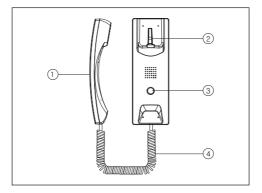

1 HANDSET

2 HOOK S/W


- **③ DOOR RELEASE BUTTON**
- ④ SPRING CORD

### 2. OPERATION INSTRUCTION

- 1. Hear a call sound from receiver  ${f 1}$  When visitor press the call button on the doorstation
- 2. Converse with visitor after raise up handset
- 3. After ascertain the visitor, press the door release button 3 to open door


NOTE : No need to connect extra power by reason of it's supplied power source from doorstation

#### 3. WIRING DIAGRAM

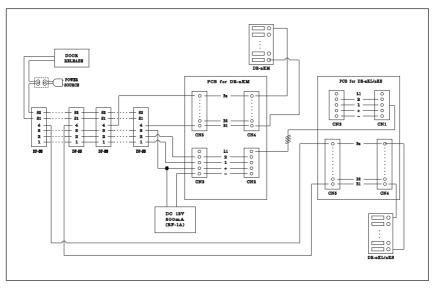

## 4. INSTALLATION

- 1) Please attach a bracket on the wal correctly with screw.
- 2) After the attachment of bracket, please Adjust the groove of the product with a Bracket and then pull it down.

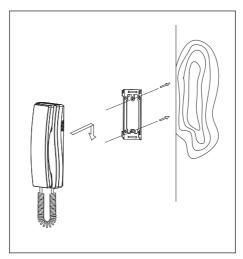



#### **COMMAX Co., Ltd.**

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea Int'l Business Dept. : Tel.; +82-31-7393-540~550 Fax.; +82-31-745-2133 Web site : www.commax.com

Printed In Korea / 2011.06.105