


K641/K641LX LCD Keypad Quick Start

P ▲ R ▲ D O X

Overview

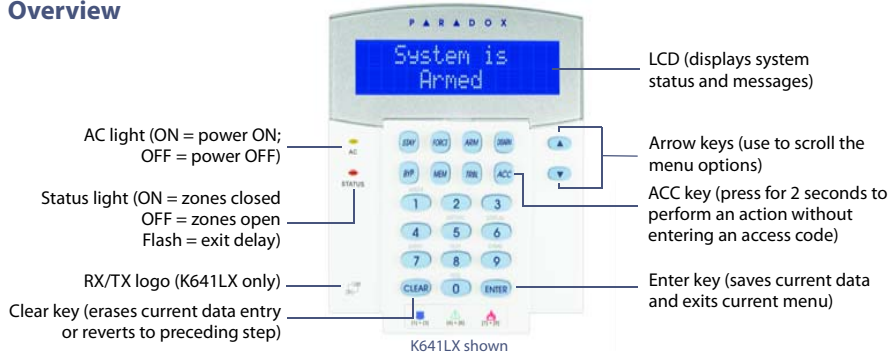

How to Arm

Arming When Exiting (Regular/Force Arm)

To arm your system when exiting:

Step	Description
1.	Enter your [ACCESS CODE]. <ul style="list-style-type: none">To Regular arm, press the [ARM] key (arms entire area when all zones are closed).To Force arm, press the [FORCE] key (arms entire area without waiting for all zones to close).
2.	Select the desired area or press the [0] key for all areas.

Arming When Staying (Stay/Instant Arm)

To arm your system when staying:

Step	Description
1.	Enter your [ACCESS CODE]. <ul style="list-style-type: none">To Stay arm, press the [STAY] key (arms area's perimeter only, which allows you to remain in the protected area).To Instant arm, press the [5] key (stay arms the area but an alarm will occur instantly any zone opens)
2.	Select the desired area or press the [0] key for all areas.

How to Disarm

To disarm your system when entering:

<i>Step</i>	<i>Description</i>
1.	Enter your [ACCESS CODE].
2.	Select the desired partition if necessary.

Panic Keys

To send a silent or audible alarm to your security company, press and hold one of the key combinations listed below, for two seconds.

<i>Panic Alarm</i>	<i>Key Combination</i>
Police	[1] & [3]
Medical	[4] & [6]
Fire	[7] & [9]

Alarm Memory Display

To view the alarms that occurred during the last armed period:

<i>Step</i>	<i>Description</i>
1.	Disarm the system.
2.	Press [MEM]. All zones that were breached during the last armed period will be displayed. Use the arrow keys to view zones.
3.	Press [CLEAR] to save and exit.

Trouble Display

The LCD screen will display all troubles when they occur. To view and clear troubles:

<i>Step</i>	<i>Description</i>
1.	Press [TBL].
2.	Scroll through the list of troubles using the arrow keys. Refer to the EVO User Guide for trouble descriptions and instructions.
3.	Perform the recommended repair instruction to clear the trouble. If no instructions are given, contact your security company.
4.	Press [CLEAR] to exit.

How to Bypass Zones

When a zone is bypassed, it remains unarmed when the corresponding area is armed. To bypass zones:

<i>Step</i>	<i>Description</i>
1.	Enter your [ACCESS CODE].
2.	Press [BYP].
3.	Select the zone you want to bypass by entering the zone number, e.g., zone 3 = 003).
4.	Press [ENTER].

© 2011 Paradox Ltd. All rights reserved.
Specifications may change without prior notice.
For complete patent, trademark, certification, and warranty information, please visit www.paradox.com.