DoorProtect Plus Fibra User manual

Updated August 9, 2023



DoorProtect Plus Fibra is a wired bus opening, shock, and tilt detector. Designed for indoor use. Supports connection of a third-party normally closed detector.




The detector is compatible with <u>Hub Hybrid (2G)</u> and <u>Hub Hybrid (4G)</u>. Connection to other <u>hubs</u>, <u>radio signal range extenders</u>, <u>ocBridge Plus</u>, and <u>uartBridge</u> is not provided. Integration with other security systems is also not provided.

DoorProtect Plus Fibra only works as a part of the Ajax system, communicating with the hub via the secure Fibra protocol. The wired connection range is up to 2,000 meters when connected via twisted pair U/UTP cat.5.


DoorProtect Plus Fibra is the device of the new Fibra wired product line. Such devices can only be purchased, installed and administered by accredited Ajax partners.

Functional elements

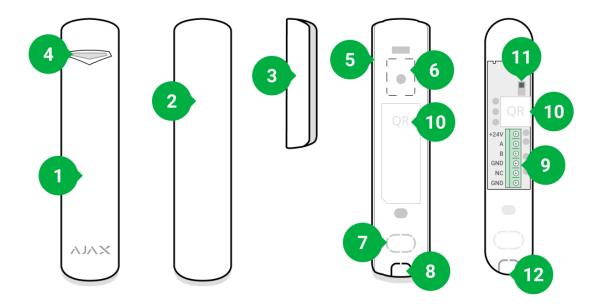

- 1. DoorProtect Plus Fibra opening, shock, and tilt detector.
- 2. Large magnet. Acts up to 2 cm away from the detector.
- 3. Small magnet. Acts up to 1 cm away from the detector.
- **4.** LED indicator.
- **5.** Rear panel of the detector body. Used as a mount.
- **6.** Perforated part of the mounting plate. It is necessary to trigger a tamper in an attempt to detach the detector from the surface. Do not break it off.
- **7.** Perforated part for routing wires through the wall.
- **8.** Perforated part for routing wires at the bottom of the detector.
- 9. Terminal block for detector connection.
- **10.** QR code with the device ID. Used to connect to the Ajax system.
- 11. Tamper button.
- **12.** Hole for attaching the mounting panel with a screw.

Operating principle

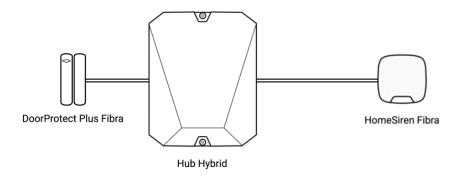

DoorProtect Plus Fibra is a wired opening, shock, and tilt detector. It connects to the hub via a metallic bus and uses Fibra protocol.

The detector responds to alarms of three types: opening, shock, and tilt.

The detector can be positioned horizontally. If there is no need to detect the opening of doors or windows, use only the detector part (without magnets) and disable the magnetic sensor in the settings.

If triggered, armed DoorProtect Plus Fibra transmits the alarm signal to the hub within 0.15 seconds, activates the sirens connected to the hub, and notifies the user and the security company.


Users know exactly where an alarm is detected. Notifications state the name of the hub (the name of the guarded facility), the name of the device, and the <u>virtual room</u> to which the detector is assigned.

How Ajax notifies users of alarms

More about Ajax opening detectors

Opening detection


The detector registers the opening of doors or windows with a reed switch. If installed using a standard method, the detector consists of two parts: the detector and the magnet. The detector part is mounted on a frame/fixed element of a structure, while the magnet part is attached to a moving wing/sliding part.

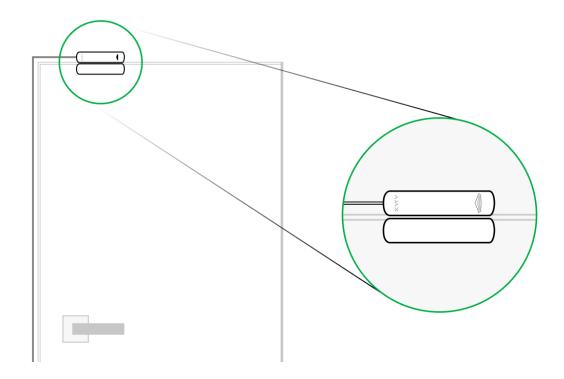

The sensitive element of the detector is a reed switch (**sealed contact**). This is a small flask with an open contact group inside. When a magnet is brought to the detector, a magnetic field is generated and the detector contacts are magnetized, attracted, and closed. Opening the flap or door moves the magnet away from the reed switch, which opens the circuit, and the detector detects opening.

It takes a single magnet for the DoorProtect Plus Fibra detector to create a magnetic field. Use a small or large magnet depending on the conditions at the installation site.

DoorProtect Plus Fibra has two reed switches, which allows you to install a magnet on both the left and right side of the detector. Note that DoorProtect Plus Fibra works with one magnet on one side only. If magnets are installed on both sides, the detector will not detect the opening correctly.

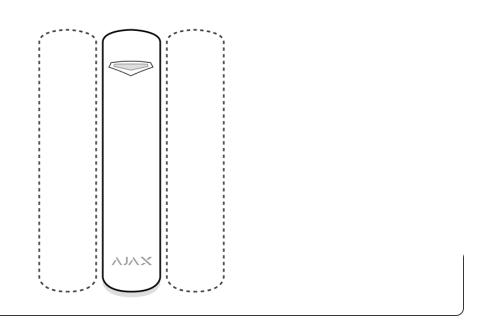

Shock detection

To detect shock and vibration, the detector is equipped with a built-in accelerometer. It responds to attempted burglary, e.g. an attempt to break down a door/window or drill through a door lock.

Tilt change detection

You can attach DoorProtect Plus Fibra to windows, including skylights, and arm the system when the window is in the ventilation mode (be sure to deactivate the magnetic detector in the settings before you do this). To detect changes in the door or window position, attach the detector to a moving wing.

For additional protection, the detector features a built-in accelerometer. The detector uses it to notify the user if an intruder attempts to open or break through a window that was opened for ventilation. The tilt sensor detects vertical deflection of the device of more than 5°.

Fibra data transfer protocol

The detector uses **Fibra technology** to transmit alarms and events. This is a two-way wired data transfer protocol that provides fast and reliable communication between the hub and other devices within the system. Fibra uses the bus

connection method to immediately transmit data from the system, even if it comprises 100 devices.

Fibra supports block encryption with a floating key and device authentication at every communication session to prevent sabotage and device spoofing. The protocol provides for regular polls of detectors by the hub at intervals of 12 to 300 seconds to monitor communication with all devices and display their statuses in real-time in Ajax apps.

Learn more about Fibra protocol

Connecting a third-party wired detector

You can connect an external wired NC (normally closed) detector to DoorProtect Plus Fibra. This can be any detector: motion, opening, or vibration.

DoorProtect Plus Fibra cannot power a third-party detector. It should be connected separately. For the type and voltage of the third-party detector, refer to the device documentation or contact the manufacturer's technical support.

How to connect a wire detector

Sending events to the monitoring station

The Ajax system can transmit alarms to the <u>PRO Desktop</u> monitoring app as well as the central monitoring station (CMS) as a <u>SurGard (Contact ID)</u>, <u>ADEMCO 685</u>, <u>SIA DC-09 (ADM-CID)</u>, and other proprietary protocols. A complete list of supported protocols is <u>available here</u>.

Which CMSs can the Ajax system be connected to

Types of DoorProtect Plus Fibra events to be transmitted to PRO Desktop and CMS:

1. Primary detector alarm.

- 2. External NC detector alarm.
- 3. Tamper alarm/recovery.
- **4.** Hub connection loss/restoration.
- **5.** Turning DoorProtect Plus Fibra off/on.
- **6.** Unsuccessful attempt to arm the security system (with **Integrity Check** enabled).

When an alarm is received, the operator of the security company knows exactly what happened and where to send the fast response team. Address capacity of Ajax devices allows you to send not only events, but also the type of the device, its assigned name, and the room of its location to the PRO Desktop/CMS (the list of transmitted parameters may differ depending on the type of the CMS and the protocol selected for communication with the CMS).



The device ID, the loop (zone) number, and the bus number can be found in its states in the Ajax app.

Selection of the installation site for the detector

When choosing where to place the detector, consider the parameters that affect its normal operation: Fibra signal strength, length of the cable for connecting the detector, and the opening detection zone.

Consider the placement recommendations when designing your facility's security system. Design and installation of the security system should be carried out by professionals. A list of authorized official Ajax partners is **available here**.

Design and preparation

For the system to work correctly, it is important to properly design the project and install all devices correctly. Failure to follow the basic installation rules and recommendations of this manual may result in detector malfunction, false alarms, or loss of connection with already installed devices.

When designing the layout scheme of the detectors, consider the wiring diagram of the power cables laid on the site. Signal cables must be laid at a distance of at least 50 cm from the power cables when lying parallel, and, if they intersect, it must be at a 90° angle. Note that if you connect multiple devices on the same bus, detectors are connected in sequence.



The maximum number of connectable devices for the Hub Hybrid is 100 at the default settings.

For facilities that are under construction or renovation, cables are laid after the main wiring of the facility. Use protective tubes to organize and secure the cables; ties, clips, and staples can be used to anchor them.

When laying cables externally (without mounting them inside the walls), use an electric channel raceway. Raceways should be no more than half-filled with cables. Do not allow cables to sag. The raceway should be hidden from view if possible — for example, behind furniture.



We recommend laying cables inside walls, floors, and ceilings. This will provide greater security; the cables will not be visible, and it will be impossible for an intruder to access them.

When selecting a cable, consider the length of the connection lines and the number of detectors to be connected; these parameters affect the signal strength. We recommend using shielded copper cables with a high-quality insulation layer.

When installing, observe the bend radius that the manufacturer specifies in the cable specs. Otherwise, you risk damaging or breaking the conductor.

Be sure to check all cables for bends and physical damage before installation. Perform the installation in a way that minimizes the possibility of damage to the cables from the outside.

Signal strength and cable length

The Fibra signal level is determined by the number of undelivered or corrupted data packages over a certain period. The icon | | on the **Devices** tab indicates the signal strength:

- Three bars excellent signal strength.
- **Two bars** good signal strength.
- One bar low signal strength, stable operation is not guaranteed.
- Crossed out icon no signal.

The signal strength is influenced by the following factors: the number of detectors connected to one bus, the length, and type of cable, and the proper connection of the wires to terminals.



Check the Fibra signal strength before final installation of the detector. With a signal strength of one or zero bars, we do not guarantee stable operation of the device.

The permissible cable length depends on its type, material, and the method of connecting the detectors. When connected via the **Beam connection (Radial wiring)** using the U/UTP cat.5 (4×2×0.51) twisted pair), the wired connection length can reach up to 2,000 meters.

When devices are connected via the **Ring connection method**, the maximum cable length is 500 meters in case of using a twisted pair.

How to calculate the wire connection length



Connecting devices using the **Ring connection method** will be available with future OS Malevich updates. Hardware update of Hub Hybrid won't be required.

How OS Malevich updates

Detection zone

When choosing where to place the detector, conduct a <u>Detection Zone Test</u> to verify the operation of the device and to ensure that the detector responds correctly to opening and closing of a door or a window.

Installation recommendations

DoorProtect Plus Fibra has two reed switches. This allows both left- and right-hand installation of the magnet. DoorProtect Plus Fibra works with one magnet on one side only. If magnets are attached on both sides, the detector cannot detect the opening correctly.

The choice of the magnet depends on detector placement. Smaller magnets work at distances of up to 1 cm, while larger ones work at distances of up to 2 cm. Do not exceed the boundary distance between the detector and the magnet. This may cause false alarms or detector malfunction (it will not react to closing/opening of the door or window).

If you intend to use a shock and/or tilt sensor only, you don't need to install a magnet next to the detector.

Do not install the detector

- 1. Outdoors, as this can lead to false alarms and detector failure.
- **2.** With two magnets at a time. DoorProtect Plus Fibra recognizes one magnet only on one side of the detector left-hand or right-hand.
- **3.** With a magnet installed more than 1 cm (if a small magnet is used) or 2 cm (if a large magnet is used) away from the detector. This may result in false alarms or malfunction of the detector (it will not react to closing/opening of the door or window).
- **4.** Inside premises with temperature and humidity outside the permissible limits. This could damage the detector.



Do not install DoorProtect Plus Fibra with two magnets at a time. The detector recognizes only one magnet on one side — left or right.

Installation and connection



Before installing DoorProtect Plus Fibra, make sure to select the optimal location following the requirements of this manual! Cables must be hidden and located in a place that is difficult for burglars to access to reduce the likelihood of sabotage. Ideally, mount them in the walls, floor, or ceiling. Before final installation, test the detection zone and the Fibra signal strength.


DoorProtect Plus Fibra is connected with a 4-core cable: two cores for powering the device (+24V and GND) and two cores for data transmission (line A and line B).

When connecting to the device terminals, do not twist the wires together; solder them. The ends of the wires that will be inserted into the terminals should be tinned or crimped with special tips. This will ensure a reliable connection. **Follow safety procedures and regulations for electrical installation work**.


How to calculate the wire connection length

To mount a detector:

1. Turn off the hub. Disconnect the external power and the hub backup battery.

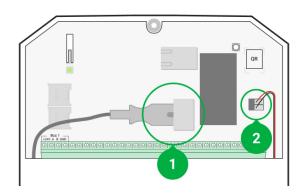

- 1 External power supply
- 2 Backup battery
- **2.** Run the detector connection cable into the hub casing and connect the wires to the bus.

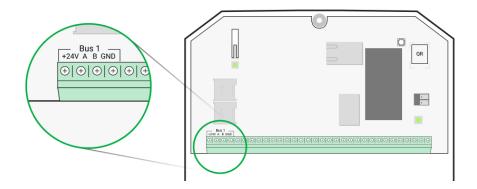


+24V — power supply input

A, B — signal terminals


GND — ground

3. Remove the rear panel of the detector and gently break out the perforated part to lead the cable out.



4. Route the cable from the hub into the detector enclosure through the hole made.

5. Connect the wires to the terminals according to the scheme below. Follow the polarity and connection order of the wires. Securely fasten the wires to the terminals.

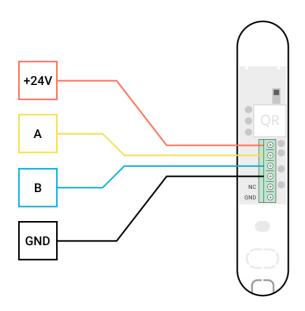

+24V — power supply input

A, B – signal terminals

GND – ground

- **6.** If the detector is not the last one in the connection line, prepare a second cable in advance. The ends of the wires of the first and second cables, which will be inserted into the detector terminals, must be tinned and soldered together, or crimped with special tips.
- 7. If the detector is the last one in the line and the **Beam connection (Radial wiring)** is used, install a terminating resistor by connecting it to the signal terminals of the device. When the **Ring connection method** is used, a terminating resistor is not needed.



We recommend using the **Ring connection method** (hub – device – hub). If the ring is broken, not a single device will be disabled. In this case, two beams are formed, which will continue to operate normally and transmit events to the hub. If the ring is broken, the users and security company receive notification.



- **8.** Temporarily secure the detector using a double-sided adhesive tape or other temporary fasteners at the chosen installation place.
- **9.** Where necessary, temporarily attach the magnet.
- **10.** Turn on the hub to supply power to the connected detector with power. When power is applied, a detector LED will notify that the power is turned on.
- 11. Add a detector to the system.
- **12.** Conduct the **Fibra Signal Strength Test**. The recommended signal strength value is two or three bars. Otherwise, check the connection and the condition of the cable.
- 13. Run a detection zone test:
 - To check the opening sensor, open and close the window on which the device is mounted.
 - Gently hit the window/door to check the shock sensor.
 - To check the tilt sensor, tilt the window on which the detector is mounted.
- **14.** If the detector doesn't respond to triggering in 5 out of 5 cases during the test, reconsider the installation location or method. The magnet may be too far from the detector, or the detector may be installed incorrectly.
- **15.** Secure the detector with bundled screws using at least two fixing points (with one fixing point in the perforated part of the mount above the tamper). When using other fasteners, make sure they do not damage or deform the mounting panel.



taped, the tamper will not be triggered when the device is detached from the surface.

Connecting a third-party wired detector


You can connect a wired NC (normally closed) detector of any type — motion, opening, or vibration — to DoorProtect Plus Fibra.

DoorProtect Plus Fibra does not power a third-party detector. It should be connected separately. For the type and voltage of the third-party detector, refer to the device documentation or contact the manufacturer's support service.

Install a third-party detector at the distance no more than 1 meter away from DoorProtect Plus Fibra. Increasing the length of the wire degrades the quality of communication between devices.

To connect a third-party wired detector:

- 1. Turn off and de-energize the hub. Disconnect the backup battery.
- **2.** Remove the front panel of DoorProtect Plus Fibra.
- **3.** Route the cable of the third-party wired detector into the DoorProtect Plus Fibra enclosure.
- 4. Connect the wired detector to the DoorProtect Plus Fibra terminals.

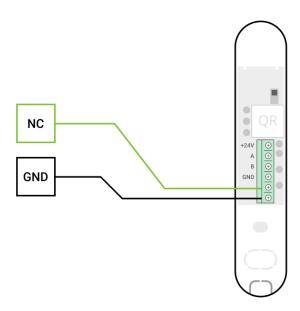

NC — connection terminalGND — ground

- **5.** Turn on the hub.
- 6. In the **DoorProtect Plus Fibra settings**, enable the **External contact** option.
- **7.** Check the operation of the connected wired detector.

Adding to the system



The detector is only compatible with <u>Hub Hybrid (2G)</u> and <u>Hub Hybrid (4G)</u>. Adding and configuring Fibra devices is only possible through the Ajax PRO app by a user with administrator rights.

Types of accounts and their rights

Before adding a device

- 1. Install the <u>PRO version of the app</u>. Log in to a <u>PRO account</u> or create a new one if you don't have it yet. Add a detector-compatible hub to the app, set the necessary settings, and create at least one <u>virtual room</u>.
- 2. Turn on the hub and make sure it has access to the internet: via Ethernet and/or mobile network. You can do this in the Ajax app or by checking the LED on the hub board. It should light up white or green.
- **3.** Make sure the hub is disarmed and does not start updates by checking its status in the Ajax app.
- **4.** Make sure the detector is physically connected to the hub.

How to add DoorProtect Plus Fibra

There are two ways to add devices: manually and automatically.

To add a detector manually:

- **1.** Open the **PRO version of the app**. Select the hub you want to add DoorProtect Plus Fibra to.
- 2. Go to the **Devices** tab and click **Add device**.
- **3.** Name the detector, scan, or type in the QR code (placed on the detector body and the packaging), select a room and a group (if the **group mode** is enabled).
- 4. Click Add.

To have the detector added automatically:

- **1.** Open the **PRO version of the app**. Select the hub you want to add DoorProtect Plus Fibra to.
- 2. Go to the **Devices** tab and click **Add device**.
- 3. Select Add Bus Devices. After scanning, a list of all devices physically connected to the hub, which have not yet been added to the system, will be displayed on the screen. The devices are sorted by the buses they are physically connected to.

After scanning the buses, the detectors will be displayed in the **Devices** tab. The order of the devices will depend on which bus they are connected to.

By default, the device name includes the detector name and its identifier. To connect detectors to a hub, edit their name, and assign a room and a group to the device (if the group mode is activated in the hub settings).

To check which detector you actually deal with, use either LED indication or detector triggering.

Method 1: Via LED indication

In the list of available devices to add, click on any option. The LED of this detector will start blinking after you press it. This way, you'll know exactly which detector you're adding, how to name it, and which room and group it should be assigned to.

To add a detector:

- **1.** Click the detector in the list.
- 2. Create a name.
- **3.** Specify the room and the security group (if enabled).
- 4. Click Save.

If the detector is connected to the hub successfully, it will disappear from the list of available detectors.

Method 2: By detector alarm

Enable the **Add Detectors by Alarm** option above the list of detectors.

Trigger an alarm. When triggered, the detector will move to the top of the list to the **Recently triggered devices** category. The detector will stay in this category for 5 seconds, after which it will move back to the bus category.

To add a detector:

- 1. Click on the device in the list.
- **2.** Create a name.
- **3.** Specify the room and the security group (if enabled).
- 4. Click Save.

If the detector connects to the hub successfully, it will disappear from the list of available detectors.



Device status updates in the list depend on the Fibra settings; the default value is 36 seconds.

If the connection fails, check the accuracy of the wired connection and try again. If hub already has the maximum number of devices added (for Hub Hybrid, the default is 100), you will get an error notification when you add one.

DoorProtect Plus Fibra only works with one hub. When connected to a new hub, the detector stops exchanging commands with the old one. Once added to a new hub, DoorProtect Plus Fibra is not removed from the list of devices of the old hub. This must be done through the Ajax app.

Malfunctions

When a detector identifies a fault (for example, there is no connection via the Fibra protocol), the Ajax app displays a malfunction counter in the upper left corner of the device icon.

All malfunctions can be seen in the <u>detector states</u>. Fields with malfunctions will be highlighted in red.

Malfunctiont is displayed if:

- The detector temperature is out of acceptable limits.
- The detector body is open (tamper is triggered).
- There is no connection with the hub via the Fibra protocol.

Icons

The icons display some DoorProtect Plus Fibra states. You can view them in the Ajax app on the **Devices** tab.

Icon	Meaning
ıIİ	Fibra signal strength — displays the signal strength between the hub and the detector. Learn more
24)	The detector operates in the Always Active mode. Learn more

<u>(</u>	Entry and/or exit delay is enabled.
9	Learn more
(a)	DoorProtect Plus Fibra will work when the Night Mode is enabled. Learn more
Q	DoorProtect Plus Fibra has detected the opening of a door or a window. The icon is displayed regardless of the security mode.
ᅱ	The external contact of the DoorProtect Plus Fibra detector is on. Learn more (in progress)
® J	DoorProtect Plus Fibra has been deactivated. Learn more
© ř	DoorProtect Plus Fibra has been disabled because the number of alarms was exceeded. Learn more
Ø.	DoorProtect Plus Fibra has been disabled by timer. Learn more (in progress)
Ŋ	DoorProtect Plus Fibra has tamper triggering events deactivated by a user or PRO with administrator rights. Learn more

States

The states include information about the device and its operating parameters. DoorProtect Plus Fibra states can be found in the Ajax app:

- **1.** Go to the **Devices t**ab.
- 2. Choose DoorProtect Plus Fibra from the list.

Parameter	Meaning
	Detector temperature — it is measured on the processor and changes gradually.
Temperature	Acceptable measurement error between the value in the app and the room temperature: 2–4°C.
	The value is updated as soon as the detector identifies a temperature change of at least 1°C.
	Signal strength between the hub and DoorProtect Plus Fibra. Recommended values — 2—3 bars.
Fibra Signal Strength	Fibra — protocol for transmitting DoorProtect Plus Fibra events and alarms.
	Learn more
	The status of the connection between the hub and the detector:
Connection via Fibra	Online — the detector is connected to the hub, the connection is stable.
	Offline — the detector is not connected to the hub.
Line Voltage	The voltage value on the Fibra line to which the detector is connected.
Lid	The status of the detector tampers that respond to detachment or violation of the integrity of the body:
	Open — at least one of the body panels is open.
	 Closed — both body panels are closed (the detector is completely closed).

	When the front lid of DoorProtect Plus Fibra is open, the hub transmits the following event: "The front lid of DoorProtect Plus Fibra detector is open". If DoorProtect Plus Fibra is detached from its mount, the hub transmits the following event: "DoorProtect Plus Fibra detector detached from the mount". Learn more
	Primary detector state:
Primary Detector	 Disconnected — primary contact is disconnected.
	Open — primary contact is open.
	Closed — primary contact is closed.
	State of the external detector connected to DoorProtect Plus Fibra:
	• Disabled — the external contact is disabled (the option is disabled in the app).
External Contact	Open — the external contact is connected and in the open state.
	Closed — the external contact is connected and in the closed state.
	Indicates if the shock sensor is active:
Shock Sensor	• On — the shock sensor is on.
	Off — the shock sensor is off.
Tilt Sensor	Indicates if the tilt sensor is active:
	• On — the tilt sensor is on.

	Off — the tilt sensor is off.
Always Active	When this option is enabled, the detector is constantly in the armed mode and reports opening of the door or window on which it is installed. Learn more
	Shows the status of the device permanent deactivation function:
	No — the device operates normally and transmits all events.
	 Lid only — the hub administrator has disabled notifications about triggering on the device body.
Permanent Deactivation	Entirely — the hub administrator has excluded the detector from the system. The device does not execute system commands and does not report alarms or other events.
	By the number of alarms — the device is automatically disabled due to the excess number of alarms. The option is configured in the Ajax PRO app.
	 By timer — the device is automatically turned off by the system after the recovery time expires. The option is configured in the Ajax PRO app.
	Learn more
Alarm F	Reaction
Operating Mode	Shows how the detector reacts to alarms:
	 Instant Alarm — the armed detector immediately reacts to a threat and raises the alarm.

	 Entry/Exit — when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends. Follower — the detector inherits the delays from Entry/Exit detectors. However, when the Follower is triggered individually, it immediately raises the alarm.
Delay When Entering, sec	If active, this option shows the delay time when entering (5 to 120 seconds). Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the secured area. Learn more
Delay When Leaving, sec	If active, this option shows the delay time when entering (5 to 120 seconds). Delay when leaving (arming delay) is the time the user has to leave the secured area after arming. Learn more
Delay when entering for the Night mode, sec	If active, this option shows the delay time when entering in Night mode (5 to 120 seconds). Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the premises. Learn more
Delay when leaving for the Night mode, sec	If active, this option shows the delay time when leaving in Night mode (5 to 120 seconds). Delay when leaving (arming delay) is the time the user has to leave the premises after arming. Learn more

Firmware	Detector firmware version.
Device ID	Detector ID — Also available on the detector body and the packaging.
Device №	Device loop (zone) number.
Bus №	The number of the bus the device is physically connected to.

Settings

To change the detector settings in the Ajax app:

- 1. Go to the **Devices** tab.
- 2. Choose DoorProtect Plus Fibra from the list.
- **3.** Go to **Settings** by clicking on the gear icon 5.
- **4.** Set the required parameters.
- **5.** Click **Back** to save the new settings.

Settings	Meaning
	Detector name. Displayed in the list of hub devices, SMS text, and notifications in the event feed.
Name	To change the detector name, click on the pencil icon \lozenge .
	The name can contain up to 12 Cyrillic characters or up to 24 Latin characters.
Room	Selecting the virtual room to which DoorProtect Plus Fibra is assigned.
	The room name is displayed in the text of SMS and notifications in the event feed.

Alarm LED indication	 Controls the flashing of the detector LED in case of alarm and tamper triggering: Option enabled — the indication is enabled. Option disabled — the indication is disabled and will not report alarm and tamper triggering.
Primary Detector	When this option is enabled, the primary DoorProtect Plus Fibra detector reacts to opening and closing.
External Contact	If enabled, DoorProtect Plus Fibra registers alarms from an external detector.
Always Active	When this option is enabled, the detector is constantly in the armed mode and detects opening of the door or window on which it is installed. Learn more
Activate siren if a door or window is open	When this option is enabled, the sirens connected to the system are activated when a door or window is opened.
Activate siren if an shutter detector is open	When this option is enabled, the sirens connected to the system are activated in case of an alarm from an external detector.
Alert with a siren if a roller shutter detector is disabled	If active, the Sirens connected to the system are activated if an external detector is disabled.
Alert with a siren if a shock is detected	If active, the Sirens connected to the system are activated if the detector registers a shock.
Alert with a siren if a incline is detected	If active, the Sirens connected to the system are activated if the detector registers change the angle of inclination.
Chime Settings	When this option is enabled and the system is not armed, when opening, the detector alerts by the sound signal of sirens.
	Learn more

Alarm Reaction		
Operating Mode	 Instant Alarm — the armed detector immediately reacts to a threat and raises the alarm. Entry/Exit — when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends. Follower — the detector inherits the delays from Entry/Exit detectors. However, when the Follower is triggered individually, it immediately raises the alarm. 	
Delay When Entering, sec	Delay time when entering (5 to 120 seconds). Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the secured area. What Is Delay When Entering	
Delay When Leaving, sec	Delay time when leaving (5 to 120 seconds). Delay when leaving (arming delay) is the time the user has to leave the secured area after arming. What is Delay When Leaving	
Arm in Night Mode	When this option is enabled, the detector will enter the armed mode when using the Night mode . What is Night mode	
Delays in Night Mode	When this option is enabled, the set entry/exit delays also work in the Night mode .	

	What is Night mode
	What is Delay When Leaving
	Switches the detector to the Fibra signal strength test mode.
Fibra Signal Strength Test	The test allows you to check the signal strength between the hub and the detector over the Fibra wired data transfer protocol to determine the optimal installation location.
	Learn more
	Switches the detector to the detection zone test mode.
Detection Zone Test	The test enables the user to check the detector's reaction to the movem ent and determine the optimal installation location.
	Learn more
User Guide	Opens the User Manual of DoorProtect Plus Fibra detector in the Ajax app.
Permanent Deactivation	Allows to disable the device without removing it from the system.
	Three options are available:
	 No — the device operates normally and transmits all events.
	 Entirely – the device will not execute system commands or participate in scenarios, and the system will ignore device alarms and other notifications.
	 Lid only — the system will ignore notifications about the tamper triggering.
	Learn more
	The system can also automatically deactivate devices when the set number of alarms is

	exceeded or when the recovery time expires.	
	Learn more	
Unpair Device	Disconnects the detector from the hub and deletes its settings.	

How to set up chime

Chime is a sound signal <u>Ajax siren</u> that indicates triggering of opening detectors when the system is disarmed. The feature is used, for example, in stores, to notify employees that someone has entered the building.

Chime is configured in two stages: setting up opening detectors and setting up sirens.

Learn more

Detectors settings

- 1. Go to the **Devices** menu.
- 2. Select the DoorProtect Plus Fibra detector.
- **3.** Go to its **Settings** by clicking the gear icon 5 in the upper right corner.
- **4.** Go to the **Chime settings** menu.
- **5.** Select the events to be notified by the siren:
 - If a door or a window is open.
 - If an external contact is open (available if the **External Contact** option is enabled).
- **6.** Select the notification sound: 1 to 4 short beeps. Once selected, the Ajax app will play the sound.

- **7.** Click **Back** to save the settings.
- **8.** Set up the required siren.

How to set up a siren for Chime

Indication

Indication	Event	Note
Lights up green for about a second.	Switching on the detector.	The detector turns on as soon as the hub feeds power.
Lights up for a couple of seconds until the detector is connected to the hub.	Connecting the detector to the hub.	
Lights up green for about one second.	Alarm/tamper triggering.	
When alarmed, it slowly lights up green and slowly goes out.	Low bus voltage (7 V or lower).	Voltage of 7 V or less is considered low. Check the wired connection of the detector.

Functionality testing

The Ajax system provides several types of tests that help you make sure that installation points of devices are selected correctly. DoorProtect Plus Fibra tests do not start straight away but begin no later than a single hub-detector ping period (36 seconds with a default hub settings). You can change the ping period of devices in the **Fibra** menu of the hub settings.

To run a test in the Ajax app:

1. Select the hub if you have several of them or if you are using a PRO app.

- **2.** Go to the **Devices** menu **.**
- 3. Choose DoorProtect Plus Fibra.
- 4. Go to Settings .
- **5.** Select a test:
 - Fibra Signal Sstrength Test
 - Detection zone
- 6. Launch and conduct a test.

Maintenance

Check the functioning of the detector regularly. The optimal frequency of checks is once every three months. Clean the detector body from dust, cobwebs, and other contaminants as they emerge. Use a soft dry cloth suitable for equipment care.

Do not use substances that contain alcohol, acetone, petrol, or other active solvents to clean the detector. Wipe the lens gently, as scratches may impair the detector sensitivity.

Technical specifications

Learn more

Compliance with standards

Complete set

- 1. DoorProtect Plus Fibra.
- **2.** SmartBracket mounting panel.
- 3. Large magnet.

- **4.** Small magnet.
- **5.** Installation kit.
- **6.** Quick start guide.

Warranty

Warranty for the Limited Liability Company "Ajax Systems Manufacturing" products is valid for 2 years after the purchase.

If the device does not function correctly, please contact the Ajax Technical Support first. In most cases, technical issues can be resolved remotely.

Warranty obligations

User Agreement

Contact Technical Support:

- e-mail
- Telegram



Subscribe to the newsletter about safe life. No spam

